 
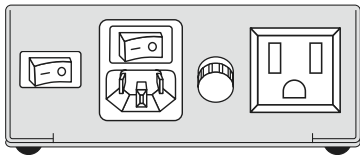 


# D-NAIL<sup>®</sup> 1.4

## DIGITAL CONTROLLER INSTRUCTIONS

---

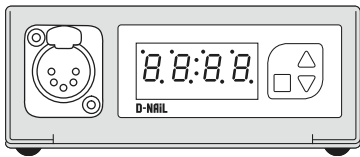

---

**READ BEFORE USE:**  
IMPORTANT USER INFORMATION

## CONTROLLER DIRECTIONS

### 1 Plug power cord into **POWER INPUT (E)**

**ENSURE HEATER SWITCH (D) IS IN OFF POSITION BEFORE PLUGGING UNIT INTO OUTLET.**

### 2 **POWER SWITCH (D)** turns on controller.

*Screen flashes 'PFA' if heater is not plugged in.*


### 3 Plug D-NAIL<sup>®</sup> heater into **HEATER INPUT (A)**

*Only D-NAIL<sup>®</sup> heaters should be used.*

*Other heaters fit plug, but may not work.*

### 4 **HEATER SWITCH (E)** turns on heater.

**ENSURE HEATER COILS ARE IN A SAFE POSITION BEFORE POWERING ON HEATER**

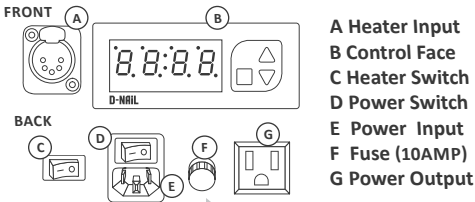

#### **TOO HIGH A DRAW WILL BLOW FUSE!**

*Do not use high power devices such as: microwave, toaster, refrigerator, heat press, hairdryer, etc.*

#### **TO CHECK OR REPLACE FUSE:**

*Push in & twist cap counter-clockwise to reveal fuse.  
If blown, replace with:  
10AMP Quick Blow Fuse*

## **SET TEMPERATURE: MUST BE ADJUSTED BEFORE FIRST USE**

- 1 Press SET button once to adjust temperature.**

*Screen will display 8.8.8.8.*

Pressing **SET** twice will display 8.2.8.8, which is the alarm set point and doesn't need adjustment. *Default value is 1112.*



**CONTROL FACE  
BUTTONS**

Pressing **SET** again will return to temperature.

- 2 Press UP and DOWN arrows to select temperature.**

*Screen will display selected temperature.*

- 3 When display stops flashing, temperature is set.**

## **AFTER USE:**

**TAKE CARE: UNLESS GIVEN TIME TO COOL, HEATER & NAIL WILL BE HOT**

- 1 Flip HEATER SWITCH (C) to off position.**

*Heater & Nail will be hot, allow time to cool.*

- 2 To unplug heater: press metal tab above HEATER INPUT (A) while gently pulling heater end. Do not tug on cord.**

## **CLEAN CONTROLLER:**

**POWER OFF CONTROLLER BEFORE CLEANING**

Wipe **CONTROLLER FACE (B)** with a soft, dry cloth. Other surfaces can be cleaned with a soft damp cloth (*wet with water or isopropyl alcohol*).




**CAUTION: IN USE HEATERS ARE HOT  
DO NOT TOUCH HEATER COILS**

## ASSEMBLE HEATER & NAIL:

DO NOT ASSEMBLE WHILE HEATER IS PLUGGED INTO CONTROLLER

**DO NOT OVER-TIGHTEN** tighten by hand threaded parts until snug

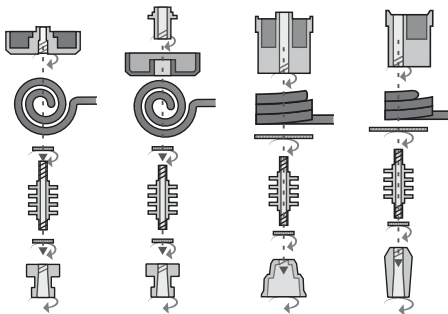

*Nail styles, materials & heater size may vary from pictures.  
Visit [D-Nail.com](http://D-Nail.com) for examples of other assemblies.*

## KEEPING NAIL CLEAN:

After every application clean unvaporized material with dry cotton swab.

Unvaporized material builds up as black residue.

**WHEN COOL USE ISOPROPYL ALCOHOL TO CLEAN.**

## CLEAN BUILD UP INSIDE DISH:

- 1 Heat dish to approximately 900°F for several minutes, until residue becomes ash.
- 2 Allow nail to cool then clean with dry cotton swab.

## GET THE MOST OUT OF YOUR HEATER:


**HEATERS WILL LAST THOUSANDS OF HOURS WITH PROPER USE**

A few things will dramatically reduce the life of a heater, **DO NOT:**

- HEAT ABOVE 1100°F / 600°C
- APPLY WATER FOR COOLING OR CLEANING
- BEND, TWIST, OR OTHERWISE STRESS THE CORD

## RECOMMENDED HEATER TEMPERATURE:

Lower temperatures are recommended

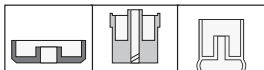

*Halo Dish*

550-650 °F

*Deep Dish*

600-650 °F


*all Quartz*

650-750 °F


## COMPLETE VAPORIZATION KIT INCLUDES:



**CONTROL STATION**  
*with power cord.*

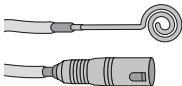

**COIL HEATER**  
*Size may vary  
from picture*

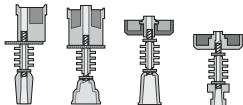

**NAIL**  
*design and  
material may vary  
from picture*

## WARRANTY INFORMATION:

**2 YEAR WARRANTY ON ALL PARTS AGAINST FAILURE.**

Repair after two years or from accidental damage can be done at a fair price.

**Lifetime warranty option available on D-NAIL.COM**

*Information from sticker on the bottom of controller is needed to claim warranty service.*

**CONTACT@D-NAIL.COM OR FACEBOOK.COM/DNAIL710**